




•ASSEMBLY OF PRODUCT

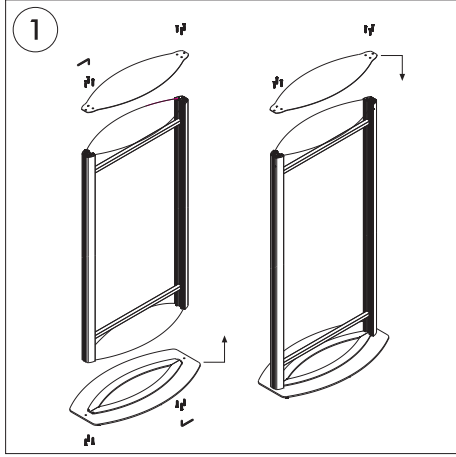

•Fix by screwing bottom and then top plates to side column on both sides.

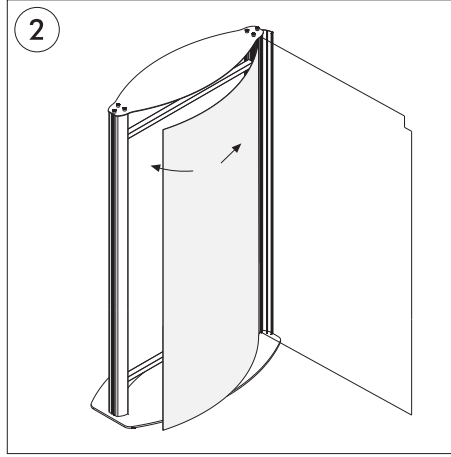

•Place opaque sheets into channels on side columns.

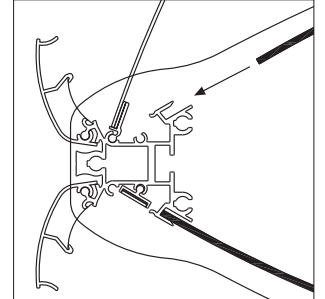


•Replacement of opaque sheets.
•Einschiebung der opelen Acrylscheibe
•Opak fon yerleşimi.


•ASSEMBLY OF POSTER




•Open all profiles upwards.

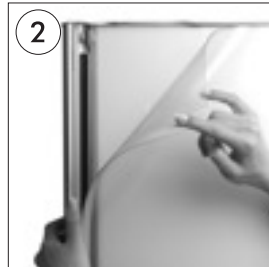

•Take-off the anti-reflex cover.

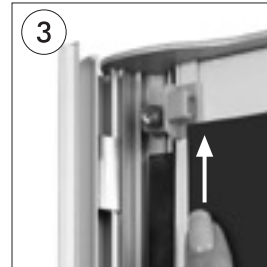

•Slide poster by rubbing it passed into clips on corners as is in photo.

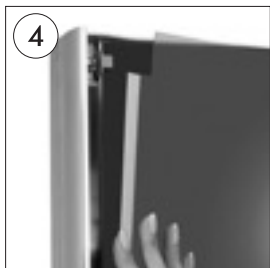

•After placing the cover back on the poster, close the profiles downwards.



•Please inform the order number on the product or on the carton (e.g. 1/110001394-460) to the place that you have made the purchase if any problem with the product occurs.

•All rights reserved. All pictures, figures and writings are secured internationally by copy-right law. Infringements will be sued by civil and legal law.